

6.1.2 Replacement intervals

Assembly	Description of procedure	Replacement interval							
		Hours	50 (*)	250	500	1000	1500	5000	6000
		Months		12	12	12			48
Engine	Engine oil				X				
	Engine Oil Filter				X				
	Fuel filter				X				
	AdBlue® Filter (1)				X				
	OAT Coolant Level (1)								X
	HOAT Coolant (2)(3)								X
	Intake sleeves (air filter - intake manifold) (1)(2)							X	
	Coolant sleeves (1)(2)							X	
	Fuel pipes (1)(2)							X	
	Alternator belt (1)						X		
	Poly-V belt, heavy duty conditions								
	Alternator belt (1)							X	
	Poly-V belt, normal conditions								
	Engine air filter - External			X					
Engine air filter- Safety				X					
Cab	Cab air filter					X			
Transmission	Transmission oil filter - Delivery		X		X				
	Transmission oil filter - Suction		X		X				
	Transmission oil					X			
	Front Axle - Differential Oil					X			
	Front Axle - Final Drive Unit Oil					X			
Brakes	Brake Oil					X			

(*) - For the first time only

(1) - Have the tractor serviced by an authorised ARBOS dealer

(2) - Replacement intervals are indicative only, and are depend largely on environmental conditions and on the condition of the pipe determined with regular inspections.

(3) - It is advisable to add an SCA (Supplemental Coolant Additive) at the first service interval.